



ASENNUSOHJE

SÄÄTÖOHJE

HUOLTO-OHJE

MONTERINGSANVISNING

INJUSTERINGSANVISNING

SKÖTSELANVISNING

INSTALLATION

ADJUSTMENT

MAINTENANCE

ИНСТРУКЦИЯ ПО УСТАНОВКЕ


ИНСТРУКЦИЯ ПО НАСТРОЙКЕ

РУКОВОДСТВО ПО ТЕХНИЧЕСКОМУ ОБСЛУЖИВАНИЮ


ASENNUSOHJE • MONTERINGSANVISNING • INSTALLATION

ИНСТРУКЦИЯ ПО УСТАНОВКЕ


1.

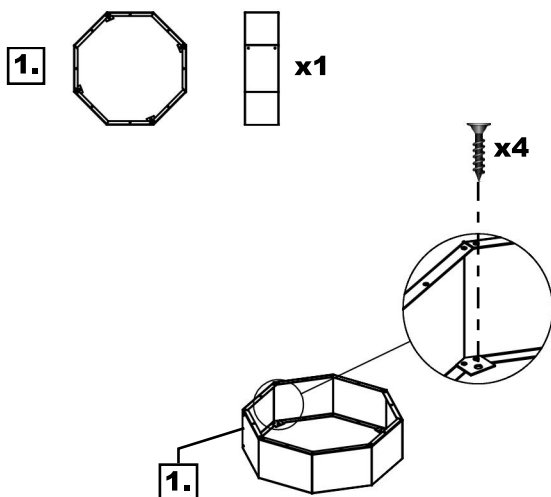


2.

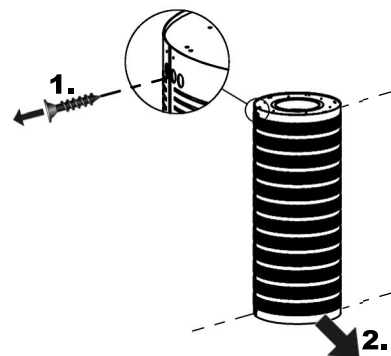


3.

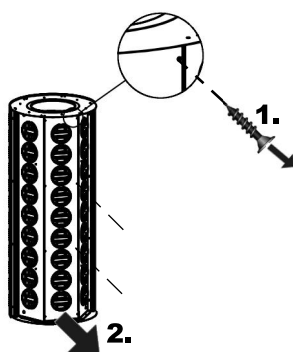

4.

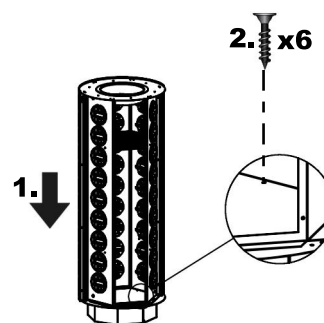

5.

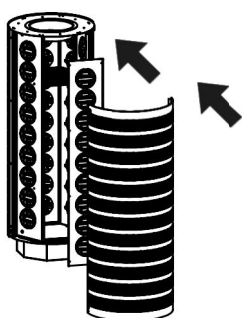


ASENNUSOHJE • MONTERINGSANVISNING • INSTALLATION


ИНСТРУКЦИЯ ПО УСТАНОВКЕ

1.


DINO-R	øD
125	125
160	160
200	200
250	250
315	315
400	400

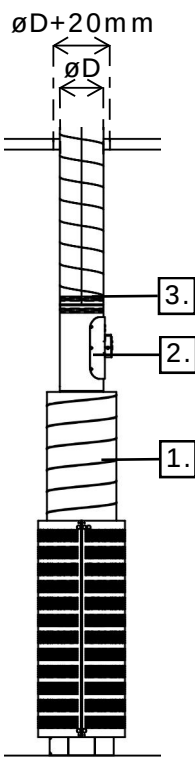


2.

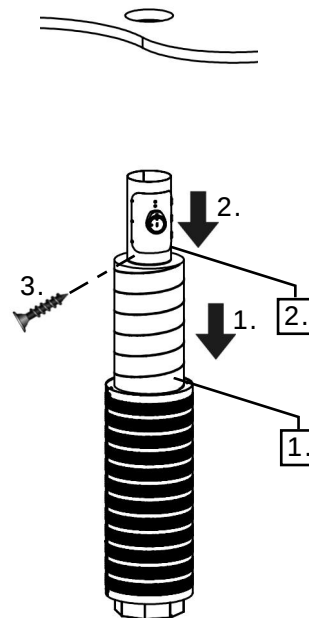

3.

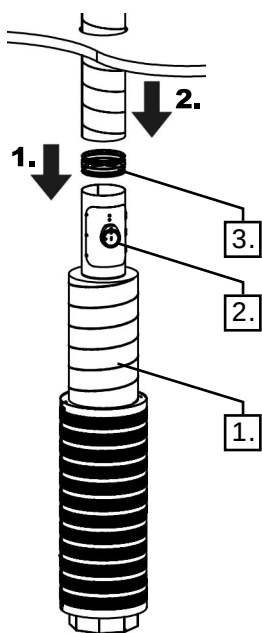



4.

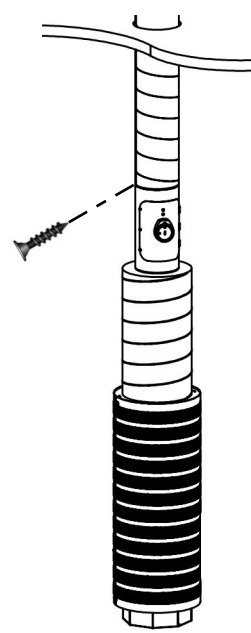


ASENNUSOHJE • MONTERINGSANVISNING • INSTALLATION

ИНСТРУКЦИЯ ПО УСТАНОВКЕ


1.

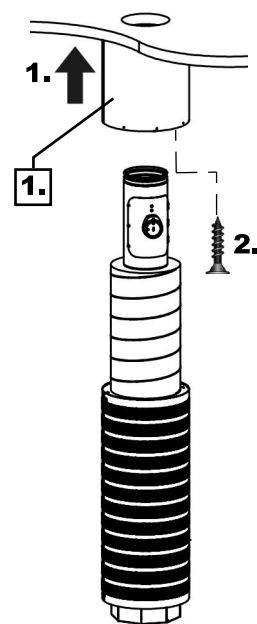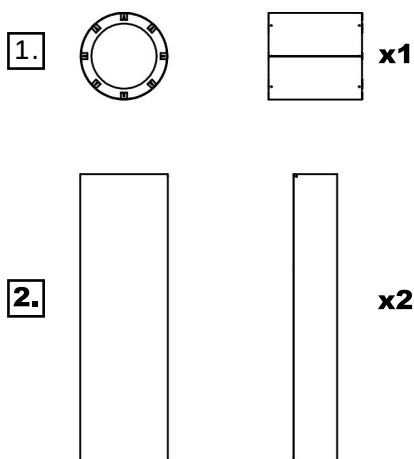

2.

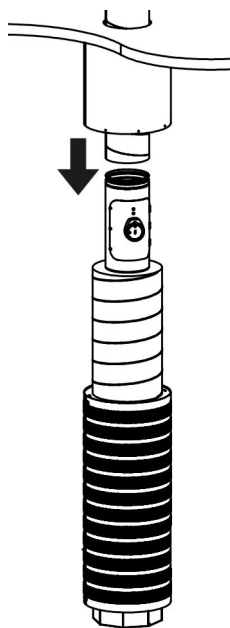


3.

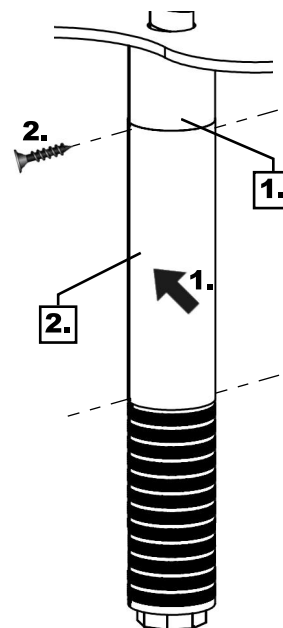

SÄÄTÖOHJE • INJUSTERINGSANVISNING • ADJUSTMENT

ИНСТРУКЦИЯ ПО НАСТРОЙКЕ

1.

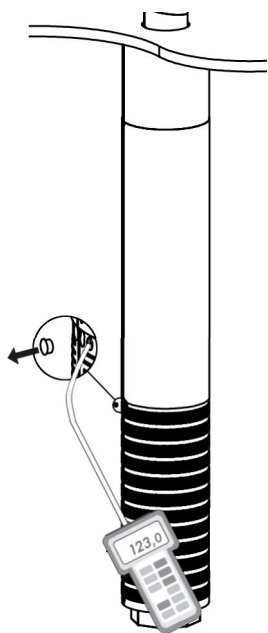


$$q_v = k \times \sqrt{\Delta p_m}$$

$$q_v = l/s$$


$$\Delta p_m = Pa$$

DINO-R	k
125	12
160	22
200	34
250	54
315	92
400	147


2.

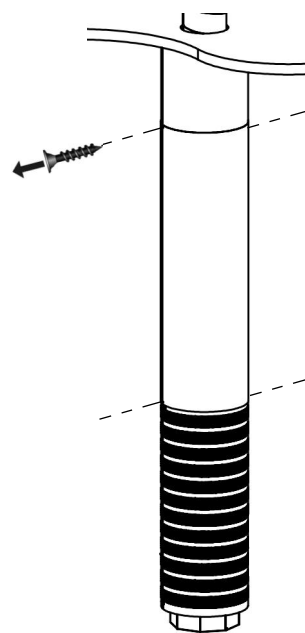


3.

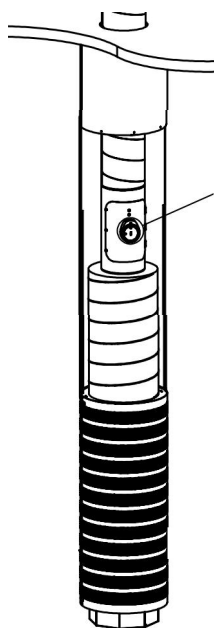


1.

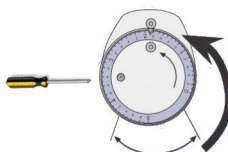

2.

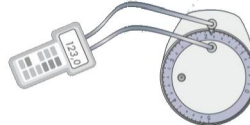

3.

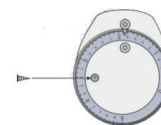

Säätösuunta - Adjustment direction
Rotationsriktningen


		k				
		125	160	200	250	315
Säätöasento Injusteringsläge Adjustment settings	4,5	20	33	49	87	167
	4	18	29	42	70	137
	3,5	15	24	33	56	110
	3	13	20	27	44	88
	2,5	11	16	21	35	71
	2	9	13,2	17,2	28	55
	1,5	8	10,4	13,9	23	44
	1	6	8,4	10,6	18	35
	0,5	5	6,5	8,2	13,4	27
	0	4	4,9	5,6	9,9	21

		k
		400
Säätöasento Injusteringsläge Adjustment settings	1	131
	2	102
	3	88,3
	4	67,3
	5	52,7
	6	38,5
	7	28,4
	8	15,5





SÄÄTÖOHJE • INJUSTERINGSANVISNING • ADJUSTMENT

ИНСТРУКЦИЯ ПО НАСТРОЙКЕ

4.

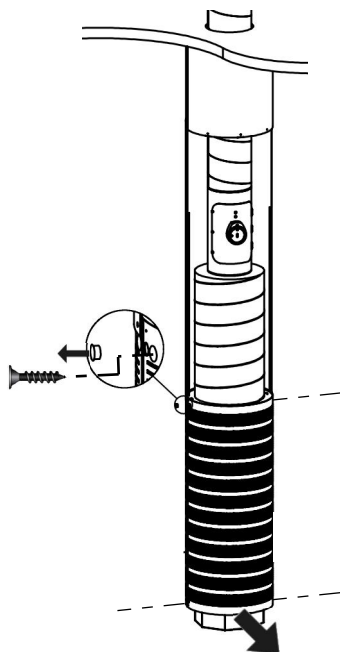


5.

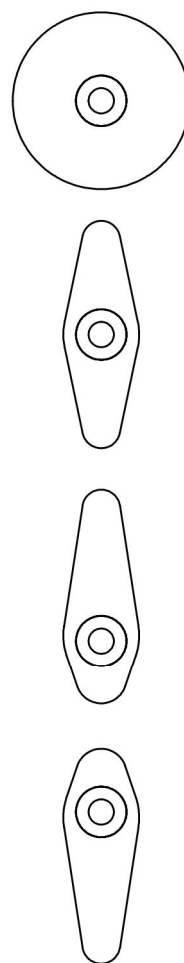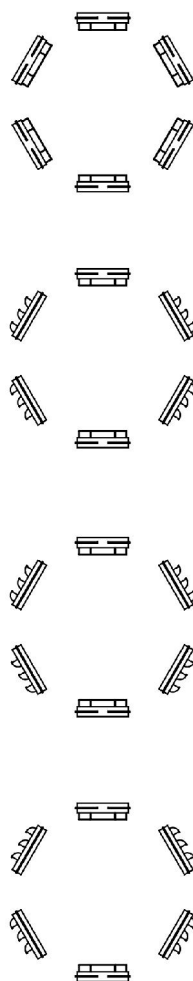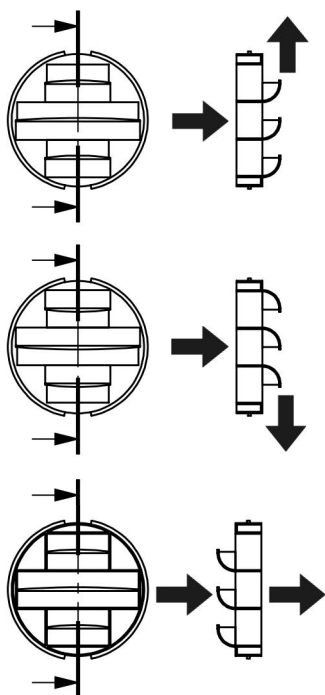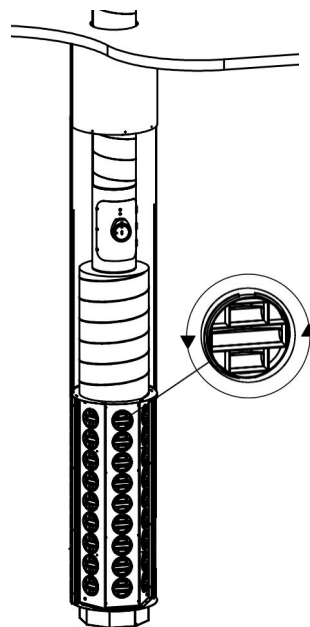


HUOLTO-OHJE • SKÖTSELANVISNING • MAINTENANCE

РУКОВОДСТВО ПО ТЕХНИЧЕСКОМУ ОБСЛУЖИВАНИЮ


1.

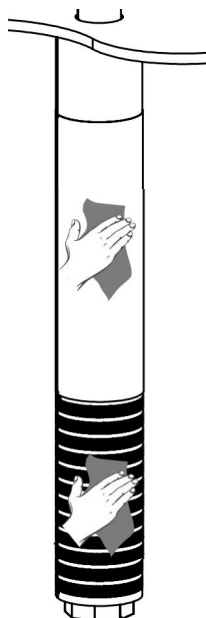

2.

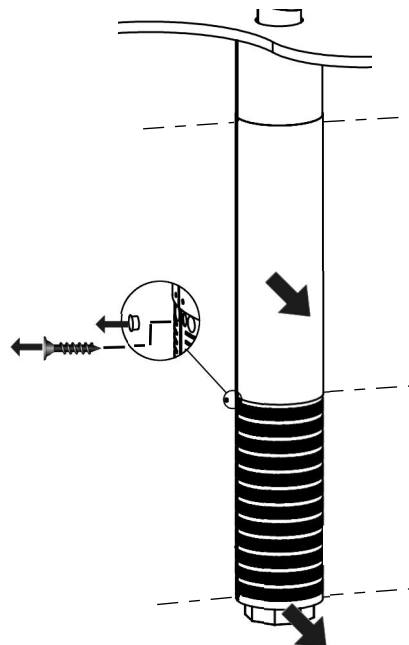

3.

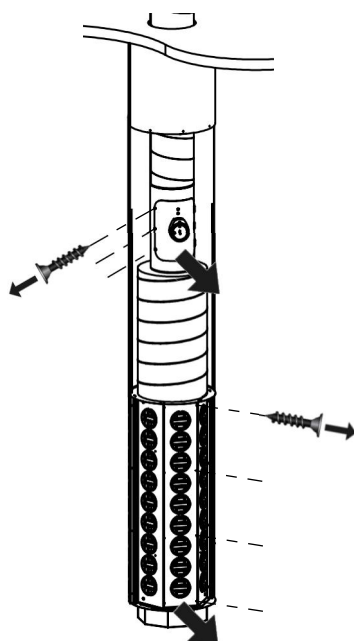

4.

